

Table of contents

Getting started with your camera 2

- Opening the USB/charging door 2
- Charging the non-removable battery 3
- Using an accessory SD/SDHC Card 4
- Turning on the camera 5
- Setting the language, date/time 6
- Taking a picture or video 7
- Reviewing pictures/videos 8
- Deleting videos/pictures 9
- Transferring, sharing online, editing 10
- Attaching the strap 11
- Keep learning about your camera 12

Product overview, features 13

- Front view 13
- Back view 14
- Side view 15

Doing more with your camera 16

- Using the camera under water 16
- Viewing videos/pictures on a TV 17
- Using the settings menu 18
- Trimming a video 19
- Making a picture from a video 19
- Zooming and panning a picture 20

Solving camera problems 21



- Resetting the camera 21

Appendix 24

Getting started with your camera

Opening the USB/charging door

  The non-removable battery charges when the computer is on and awake; disable your computer's hibernation, sleep, and standby modes. Charge the battery as often as you like—you can't over-charge it—and always fully charge before using.

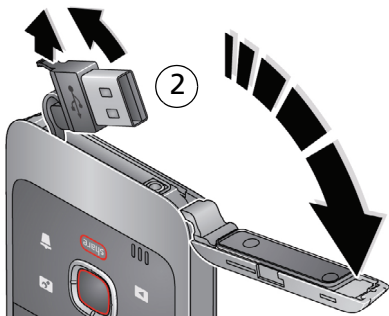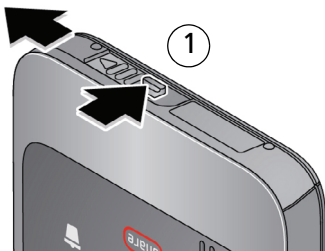


Charging the non-removable battery

Charging takes less than 4 hours.



*When the camera is plugged in,
the USB symbol appears.*

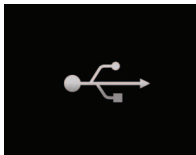


Using an accessory SD/SDHC Card

Your camera has internal memory. We recommend purchasing an SD or SDHC Card (Class 4 or higher) to store more pictures/videos.



CAUTION:

A card can only be inserted one way; forcing it may cause damage. Inserting or removing a card while the camera is on may damage the pictures, the card, or the camera.

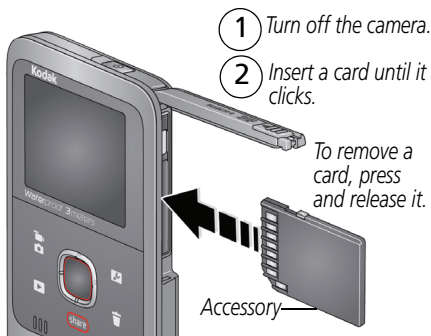

IMPORTANT: When you turn on the camera, it checks to see if a card is inserted. If so, new pictures/videos are stored on the card. If no card is inserted, new pictures/videos are stored in the camera's internal memory.

 
If pictures/videos are detected in internal memory and a card is inserted, the camera prompts you to move the pictures to the card (and erase those in internal memory).

Purchase cards www.kodak.com/go/accessories

Turning on the camera



Setting the language, date/time

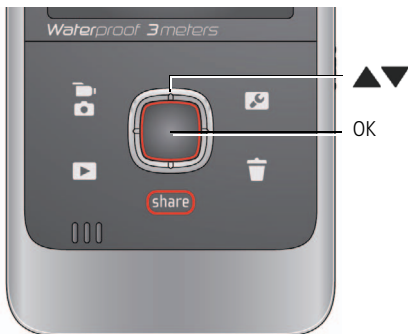

Language

▲▼ to change.
OK to accept.

Date/Time


At the prompt, press OK.

◀▶ to change current field.
▲▼ for previous/next field.
OK to accept.

**See the
Extended user
guide**

www.kodak.com/go/Ze2manuals

Taking a picture or video

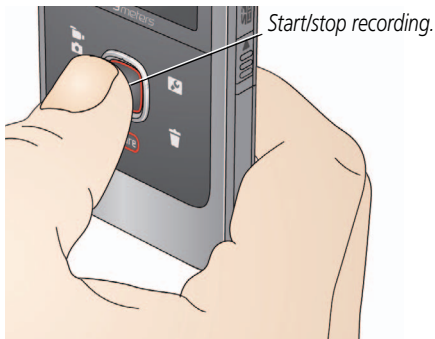

◀▶ Turn on the Glare Shield (if enabled in the Settings menu) to improve LCD viewability.

▲▼ Zoom in/out.

📷 Change between picture and video recording modes. (In Review or in a menu, return to Liveview.)

Video recording modes

HD720p	WVGA	Still
for viewing on a TV or computer, and for sharing	for conserving memory card space	for 1 MP pictures

Reviewing pictures/videos



1

Review

2



Previous/next video/picture.

3

OK

Play/Pause. (Press and hold to Stop.)

While playing a video:




Adjust volume



Fast-forward/rewind

Deleting videos/pictures

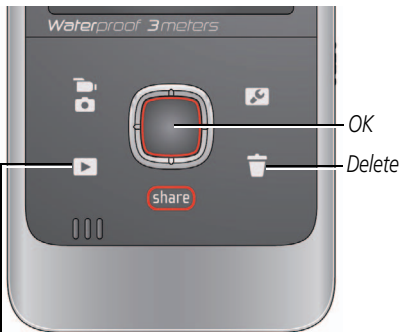

1

Review

2

*Previous/next video/picture.*

3

Delete.

4

Highlight Delete or OK, then press OK.

Transferring, sharing online, editing

- 1 Connect the camera to the computer USB port. (It turns on automatically.)



- 2 If this is the first time you've connected to this computer, follow the prompts to install the KODAK Share Button App and—for WINDOWS OS-based computers—ARCSOFT Software.*
- 3 Follow the on-screen instructions to transfer and share videos.

NOTE: It may be convenient to use a USB extension cable to connect the camera to the computer.

** For MAC OS, use the APPLE ILIFE suite of software to watch and edit videos.*

Share Button App doesn't install?	Download the right version for your operating system: www.kodak.com/go/camerasw
Get ArcSoft product support	www.arcsoft.com/support
HD video system requirements for playback	www.kodak.com/go/HDsysreq

Attaching the strap



Keep learning about your camera

Congratulations!

You have:

- *set up your camera*
- *taken videos and pictures*
- *transferred them to your computer*

Keep learning!

Finish reading this book, so you can take and share your best videos and pictures!

Go to www.kodak.com/go/Ze2support for:

- *the Extended user guide*
- *camera firmware updates*
- *answers to your frequently asked questions*

Front view



See the Extended user guide www.kodak.com/go/Ze2manuals

 
Back view



**See the
Extended user
guide**

www.kodak.com/go/Ze2manuals

Side view

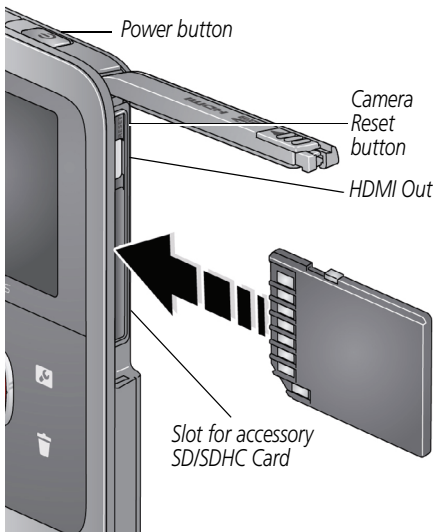

Use the Reset button

[See page 21](#)

See the Extended user guide






www.kodak.com/go/Ze2manuals


Using the camera under water

The camera does not float. Secure it to your wrist with the strap (see a floating accessory strap at www.kodak.com/go/accessories). To keep the camera waterproof, tightly close and latch all doors. **Do not open doors in water or when hands are wet.**

Waterproof integrity may be compromised if the camera is dropped. For more information, see page 24.

For the best focus and color balance under water:

- 1 Press the Settings button , then   to choose Underwater Correction.
- 2 Press OK, then   to choose Scene mode: Water, then press OK.

- 3 Press the Mode button  to take videos/pictures.

IMPORTANT: *Verify that all doors are tightly closed. This camera is waterproof to a depth of 3 metres (9.8 feet).*

After using the camera in water

- When finished using under water, go to Step 1 and turn off Underwater Correction.
- Wipe off water or debris. If the camera was used in chemically treated water or saltwater, rinse it in fresh water, then use a soft towel to dry it.
- If water has entered the camera, remove the card. Allow the camera to air-dry for at least 24 hours before using.

Viewing videos/pictures on a TV

If you have an HD television, use an HDMI cable—and get the richest playback experience. (Cables are sold separately.)

HDMI Cable



AV Cable




NOTE: Set your TV's input setting to HDMI or AV.

Set Video Output (NTSC/PAL) [page 18](#)

Purchase accessories www.kodak.com/go/accessories

Using the settings menu

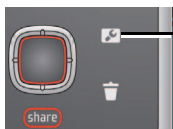











1 Press the Settings button.





2 Press   to choose a setting.

LCD Brightness & Glare Shield	Turn on when viewing the LCD in bright conditions.
Underwater Mode	Use when taking videos/pictures under water.
Effects	Normal Color, Sepia, B&W, High Saturation, or 70s Film
Video Resolution	HD720P, WVGA
Microphone Gain	Adjust sensitivity of the internal microphone.
Sounds	Turn on/off sounds.
Date/Time	Set the date/time
Share Settings	Choose which sites and email addresses are offered when you share.
Video Output	Choose the setting (NTSC, PAL) for your region.
Language	Choose your language.
Reset Settings	Return all settings to their factory default.
Format Card	Erase, format the card.
About	View firmware and ARCSOFT Software versions

Trimming a video

Use the Trim Video feature to remove an unwanted video start or finish.







- 1 Press the Review button , then   to find a video to trim.
Optional: Play, then pause the video at the desired new start point.
- 2 Press the Settings button .
- 3 Press   to choose Trim Video, then press OK.
An instruction screen appears. After you read it, press OK.
- 4 When prompted, press   to move the Start marker to the new position, then press OK. Press   to move the End marker to the new position, then press OK.

NOTE: If you need to make adjustments, press   to highlight the Start or End marker, then press   to move it. When finished, press OK.








- 5 When prompted, preview your edit or save the edit without previewing. Save the video, or choose Save As if you want to keep the existing video, as well.

Making a picture from a video

You can choose a single frame from a video, then make it into a picture. (Size and quality depend on video resolution.)


- 1 Press the Review button , then   to find a video from which you want to extract a single video frame.
- 2 Play, then pause the video at the desired frame.
- 3 Press the Settings button .
- 4 Press   to choose Make Picture. Press OK.
- 5 Follow the prompts to save the picture.

Zooming and panning a picture

- 1 Press the Review button .
- 2 Press   to choose a picture.
- 3 Press OK repeatedly to choose 2x, 4x, 8x, then back to 1x.
- 4 Use     to pan the picture.

Resetting the camera

If the camera will not turn off, use a straightened paper clip, pen, or stylus tip to gently but firmly press the button for about 1 second. The camera turns off. When you turn on the camera again, you may need to reset the Date and Time.

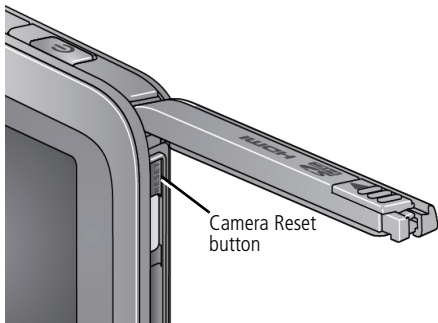

Go to www.kodak.com/go/Ze2support for the Extended user guide, firmware updates, and answers to your questions.

Status	Solution
Low battery.	■ Charge the battery (page 3).



Solving camera problems

Status	Solution
Card or internal memory is nearly full.	■ Transfer videos/pictures to your computer (page 10), then format (erase) the card in the camera (page 18) or card reader.
Corrupt or unusable card.	■ Insert another card. For the best experience, we strongly suggest purchasing a Class 4 or higher SDHC Card.
Unrecognized file.	■ Transfer videos/pictures to your computer (page 10).
LCD is hard to see.	■ Turn on the LCD Glare Shield in the Settings menu (page 18), then enable it in Liveview (page 7).
Camera will not turn on.	■ Ensure that the battery is charged (page 3). ■ Ensure the camera is clean and dry. (If it's wet inside, open all doors. Remove the card. Do not turn on the camera. Let it dry for at least 24 hours.)
Videos are blurry.	■ Ensure that the lens is clean. ■ Ensure that the subject is at least 1 m (3.3 ft) from the lens.

Status	Solution
Videos are choppy or jumpy when played on a computer.	<ul style="list-style-type: none">■ Use ARCISOFT MEDIAIMPRESSION for KODAK Software for video playback (page 10).■ Ensure that the computer system requirements are met. Go to www.arcsoft.com/support or www.kodak.com/go/HDsysreq.■ For the best experience, we strongly suggest purchasing a Class 4 or higher SDHC Card.
Videos do not play on a TV.	<ul style="list-style-type: none">■ Verify that an HDMI or AV Cable is properly connected directly to the TV input (page 17).■ Ensure that your TV settings are correct for an HDMI or AV connection.■ Ensure that the Video Output is set correctly (page 18).
Solve problems with ARCISOFT Software.	<ul style="list-style-type: none">■ Go to www.arcsoft.com/support. (For other applications, go to their support sites.)

IMPORTANT: The shock resistance and water resistance of this product are based on Kodak test results and do not constitute any guarantee that the product will perform, will not be damaged, or will not malfunction under such conditions. Though the camera is designed to withstand the effects of impact occurring during normal use, impact due to rough handling (such as throwing or dropping it from excessive heights) can cause serious damage. Even if a drop does not result in functional problems, it can cause scratching and other cosmetic damage to the camera.

FCC compliance and advisory

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. The KODAK High Performance USB AC Adapter K20-AM complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Kodak

Eastman Kodak Company

Rochester, New York 14650

© Kodak, 2011

Kodak and PlayFull are trademarks of Eastman Kodak Company.

4H8658_en